SUSPENSION SUPERSTORE
7640 E GELDING DR.
SUITE 100
SCOTTSDALE, AZ 85260
866-409-8673
WWW.SUSPENSIONSUPERSTORE.COM
SALES@ACCESSORYPARTNERS.COM

PRODUCT: **833720 - COIL SPRING SPACERS**
FORD F250/ F350 4WD

PARTS LIST **QTY**

COIL SPRING SPACER	2
M14-2.0X100BOLT	2
M14 FLAT WASHER	2

PLEASE DOUBLE CHECK THE PARTS LIST BEFORE BEGINNING INSTALLATION, TO ENSURE ALL PARTS ARE PRESENT, IF THERE IS SOMETHING MISSING, PLEASE CONTACT US IMMEDIATELY
866-409-8673

READ THE INSTRUCTIONS THOROUGHLY AND COMPLETELY BEFORE BEGINNING THE INSTALLATION.

PRIOR TO INSTALLATION:

1. Factory service manual is recommended to have on hand.
2. Secure and properly block vehicle prior to beginning installation
3. Always wear safety glasses when using power tools or working under the vehicle
4. Modifications to any part will void the warranty associated with that product.

After removing parts from vehicle, save hardware for reinstallation

IT IS RECOMMENDED THAT YOU HAVE YOUR VEHICLE'S ALIGNMENT CHECKED WHENEVER INSTALLING NEW SUSPENSION. IT IS ALSO RECOMMENDED THAT YOU ADJUST YOUR HEADLIGHTS WHENEVER YOUR VEHICLE'S RIDE HEIGHT IS ALTERED.

INSTALLATION INSTRUCTIONS - 833720

1. Unbolt the brake line bracket from the coil retainer.
2. Remove guide clip for the hub vacuum line.
3. Unbolt the sway bar end links from the sway bar

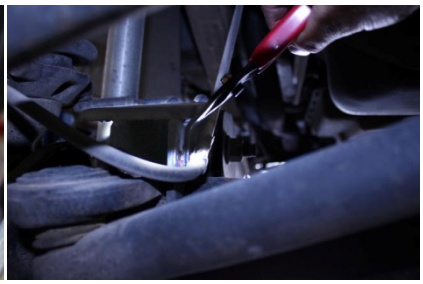

4. Disconnect the shock from the coil bucket.
5. Lower the axle, remove the coil spring, and unbolt lower coil retainer from the axle.
6. Place the new Maxtrac spacer between the axle and lower coil retainer. Tighten using provided hardware.

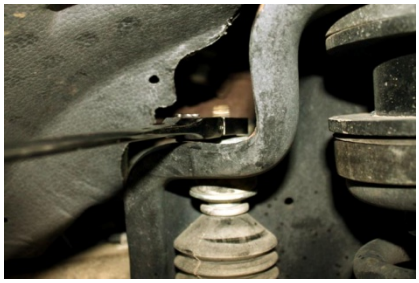

7. Jack axle up so that the coil spring is seated, then reattach shock to the coil bucket.
8. Reattach the sway bar end links.
9. Reattach brake line bracket and vacuum line.